


RAM Installation Instructions T-420A (T-420A.2 models only):

~ THESE INSTRUCTIONS ONLY APPLY TO MODEL T-420A.R2. THE T-420A.R2 IS IDENTIFIED BY THE S-VIDEO CONNECTION IT HAS AVAILABLE. ~

1. Power down the SAFARI Montage server and unplug the power supply.
2. Remove the cover by laying the server on its right side; remove the two screws at the rear of the server and sliding the cover back toward the rear.
3. Using the diagram below, locate the DIMM (memory) locations on the server's motherboard.

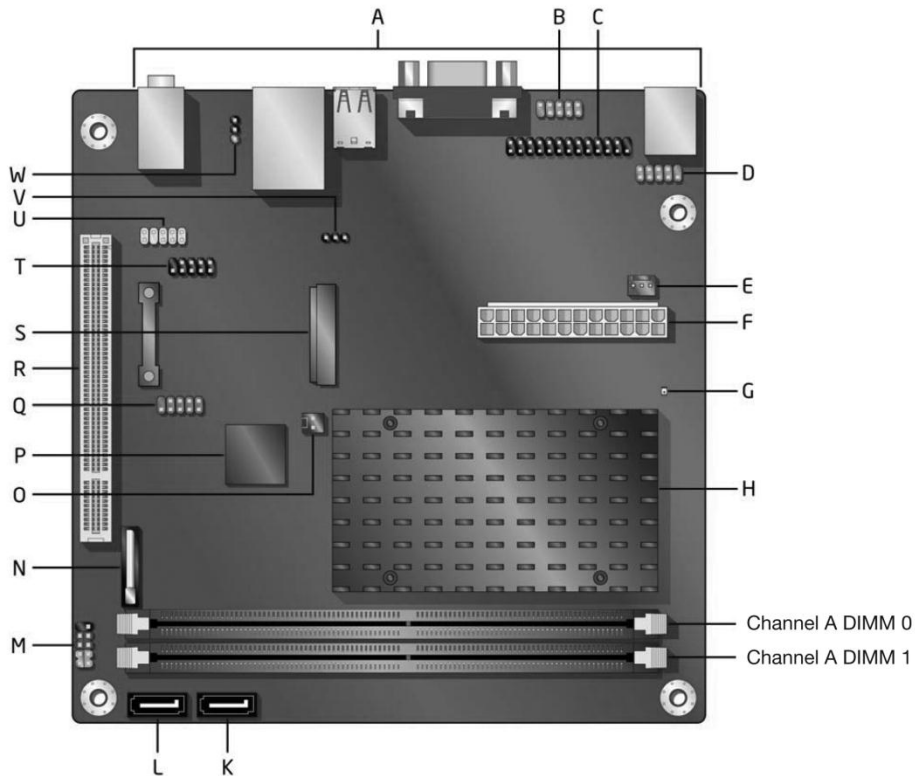

4. Insert the newly received DIMM by aligning the DIMM's edge connector with the alignment keys on the empty socket, then insert the DIMM in to the socket by pressing down with your thumbs while pulling up the ejectors with your index fingers until the DIMM locks into the socket. DIMM socket to use is DIMM 1.
5. Replace the cover and bezel removed in Steps 2 and 3.
6. Apply power and turn the server on.